


FLOWMETER

INSTALLATION

FLOWMETER ADJUSTMENT

How to handle the flowmeter

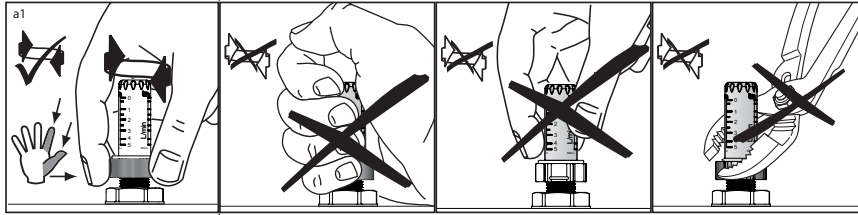

How to adjust the flow rate

